ALMEGA 2 SOFTWARE UPGRADE INSTRUCTIONS USING MEMORY STICK

ALMEGA 2 SOFTWARE UPGRADE INSTRUCTIONS

RED LED, USB STAYS ON

ester





FIG 2

PREPERATION

MEMORY STICK

- 1. Power Down the processor and then back Up again. Then Insert the USB memory stick as shown in (Fig 1).
- 2. Ensure the memory stick is recognised, i.e. the RED USB LED will STAY ON.

PARAMETER BACKUP

- 3. Parameter Backup to the USB memory stick
 - a. Press **MENU**
 - b. Press **PARAMETERS**
 - c. Press the **RIGHT ARROW** twice
 - d. Press PARAMETER CONTROL
 - e. Use the **DOWN** button to move the cursor to "SAVE PARAMETERS TO USB"
 - f. Press SELECT
 - g. Press YES then OK
 - h. The screen will now show "SAVING PLEASE WAIT..."
 - i. The screen will now show "UPDATE OK" when complete.

SET BOOTLOADER MODE

- 4. Press MENU and then PARAMETERS and select SYSTEM DETAILS.
- 5. Scroll down to BOOT LOADER REQUEST (Fig 2).
- 6. Press SELECT and wait for the processor to reboot

Head Office 59 Imperial Way Croydon Surrey CR0 4RR T: 020 8288 0668

Midlands Office

Units 1-4 Wycliffe Industrial Park Leicester Road Lutterworth Leicestershire LE17 4HG T: 01455 204980

Glasgow Office 4 Lonmay Place, Panorama Business Park, Glasgow G33 4ER T: 0141 771 6171

ALMEGA 2 SOFTWARE UPGRADE INSTRUCTIONS

ISSUE: 4 | DATE: 24/04/2019



PROGRAM BACKUP

- 1. As a precaution backup the current software version to the memory stick.
- 2. Press **BACKUP** (see Fig 3) and wait for it to finish.

PROGRAMMING:

- 1. Press SELECT on the screen (as Fig 3) and a new screen should appear (as Fig 4).
- 2. Touch the screen to highlight the file required.
- 3. Press **SELECT** to confirm.
- 4. A screen should now appear as in (Fig 5) with the **FILE SELECTED**, e.g. "A2_02_09.GLO" (note the latest software version will be different!), and with the buttons as below:

****	****	*****	******
ERASE	PROGRAMME	BACKUP	SELECT
****	*****	*****	******

- 5. Press the button **PROGRAM** and the processor should start the software upgrade as (Fig 5)
- 6. Wait for the programming to finish, the processor should reboot to the lift main screen when finished

PROGRAMMING ABORT:

1. 1. To abort the installation; press the button TO MAIN or wait for the timer to time out (typically 120s).