

LED Indicator

3194
LCA-4010L-B

LED settings can be configured with the remote control, but only qualified service personnel should make adjustments to ensure proper operation and maintain warranty.



Remote control receiver



Remote control



Use with the receiver and configure accordingly.

⑧ Up / Increase value

④ Left / Previous page

⑥ Right / Next page

② Down / Decrease value

Remote control LED configuration

Press ④ / ⑥ to switch parameter types		Press ⑧ / ② to change the setting value
1	Brightness adjustment	(1 ~ 5)
2	TX Side	LED Switch (ON/OFF)
3	RX Side	
4	Door opening	
5	Door closing	
6	Object detected	LED Color change (Green/ Red/ Blue)